 


Wheel Assembly Instructions

We recommend washing wheel prior to use.

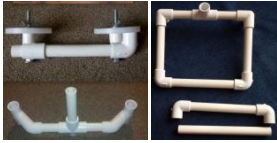

You have received the following; the wheel, tee and bearing assembly, a washer and the (3) pieces for the stand. You will need to assemble the wheel prior to use. A wrench is included for the Removable Bearing Assembly Wheels. If your tee and bearing assembly has been screwed into the inside of your wheel, please unscrew it from the inside using the enclosed wrench and then follow instructions given below.




Step 1: If you have previously received the assembly with the pin (nail)

**YOU WILL NOW USE THE ENCLOSED WRENCH
INSTEAD OF USING A NAIL**



Step 2: Place washer onto bolt. Hold head of bolt with the wrench, screw (spin) the bearing assembly into the back of wheel. Do not worry about over tightening.

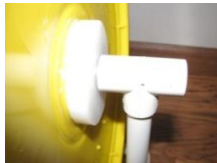

Failure to properly tighten your wheel **WILL** result in the wheel disengaging from the tee and bearing assembly and falling off.



Step 3: Assemble your stand as directed. Please make sure you have all pieces of stand put together tight/snug.



Step 4: Place the wheel (with the bearing assembly already attached) onto the pole. Make sure you have the pole snug/tight in the tee and bearing assembly. Remember this pole holds your wheel and you want it secure.



Step 5: Store the wrench in a secure location. It will be needed for cleaning purposes (see below).

NOTE: For the safety of your companion pocket pet, please make periodic checks on wheel to ensure the tee and bearing assembly remains snug.

www.spinzoneglobal.com



If you ever have any questions or concerns, PLEASE contact us immediately.

Dallie

*Your glider won't call it
"exercise!"*